


Quick Start Guide rev.1

Elite Technology™
SCOREBOARD SYSTEMS



iKeyPad™ Score Entry with Pro Score™

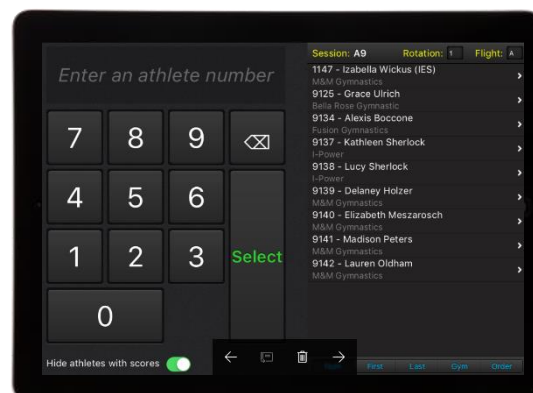


General Overview


EliteScore MVP™ is a complete, all wireless gymnastics scoring system for both men and women's artistic gymnastics specifically designed to collect scores from event judges, populate the scoring program database, and display scores to customer supplied TV/Monitors. The heart of the system is the EliteFLEX MPRO software application (Current version 3.3.4.16 dated 12-5-2020) which is integrated with the scoring program and manages Wi-Fi networking with the scoring computer, iPad/iPod score pads, and TV/Monitor(s)/Projector. The MVP™ system (Multi-View/Programs) gives you a choice of popular scoring programs Score Master™, Pro Score™ or Score Keeper™. **NOTE: iKeyPad only works with Pro Score application**

If using the Pro Score™ application, you now have the option of using iPads with iKeyPad™ to input judges scores. **This guide explains how to set-up and operate iPads equipped with the iKeyPad application.**


1. Your iPads must have a download of the iKeyPad application. www.aegroup.com
2. You must have purchased iKeyPad license keys which work with your Pro Score registration. A set number of connections will be purchased. 4 for Women or 6 for Men minimum or more if you want each judge to have an iPad.
3. Rental Systems from Elite Technology Co. come with fully licensed keys, so purchase is **not** necessary, and iPads have been set up to connect to correct network.
4. Your rental scoring system will come with a Wi-Fi wireless router and set private network SSID's for both 2.4 GHZ band and 5.0 GHZ band. We recommend connecting iPads to the 5.0 GHZ band. For the example to follow, this SSID will be GYMA5
5. Always verify each iPad is connected to correct SSID for your rental. This is done by going to main <<Menu>>Settings>>Wi-Fi<<

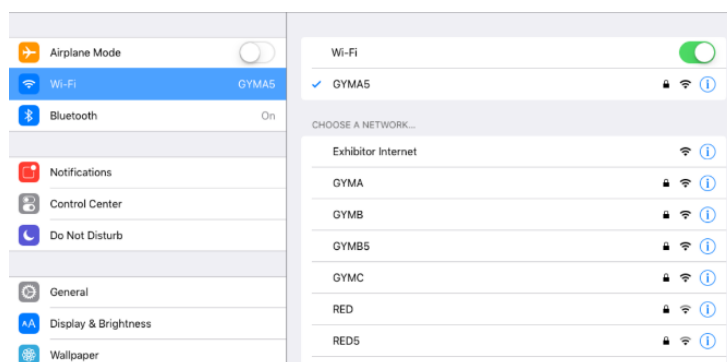


6. Before you open your iKeyPad application you must first open the **Scoreboard Generator** application found on your desktop near the main Pro Score application.

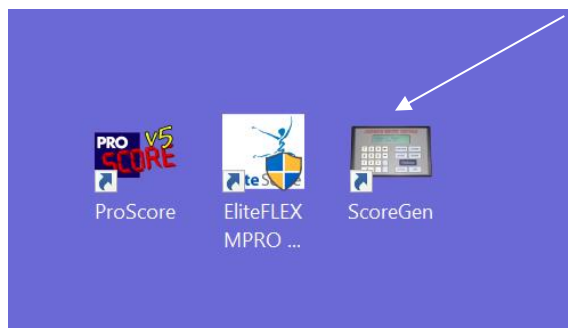

7. With your Pro Score Meet database loaded and selected in Pro Score you next open **Setup** in the Score Board Generator program (upper left corner) and open **Define iKeyPad IDs** (upper right corner)

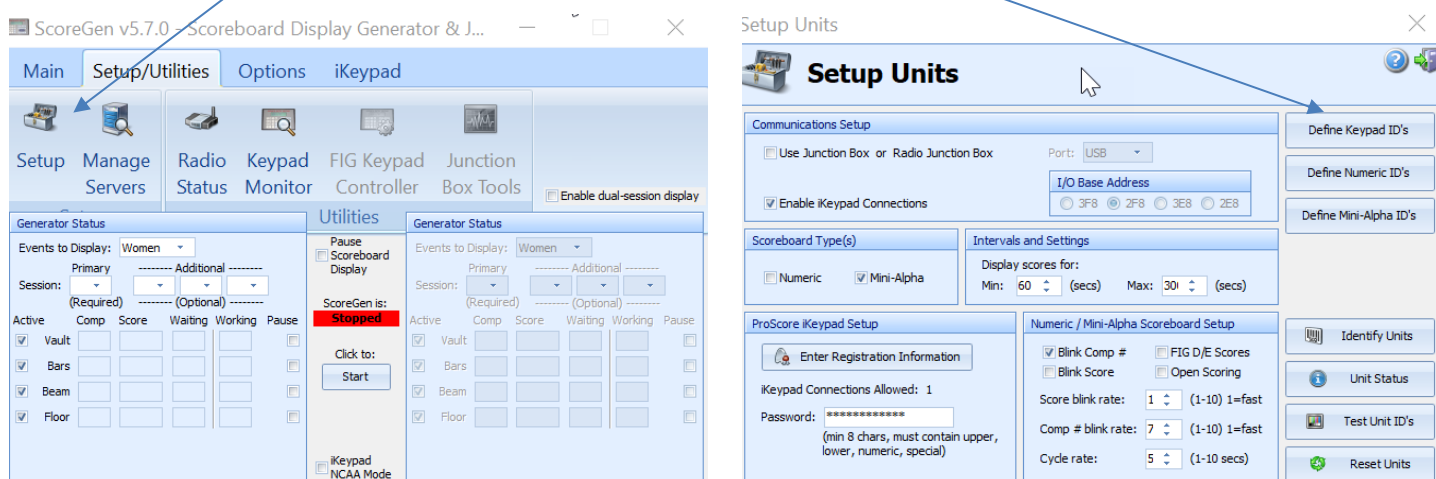

8. With rentals, the iKeyPads™ will come configured with correct number of judges inputting scores per event and their corresponding ID for each iKeypad. Most meets use one iKeyPad per event even with two judge scores as both scores for an event being entered into on iKeypad The assignments are as follows: Vault Judge #1 ID= 01 Bars Judge #1 ID= 02 Beam Judge #1 ID= 03 Floor Judge #1 ID= 04

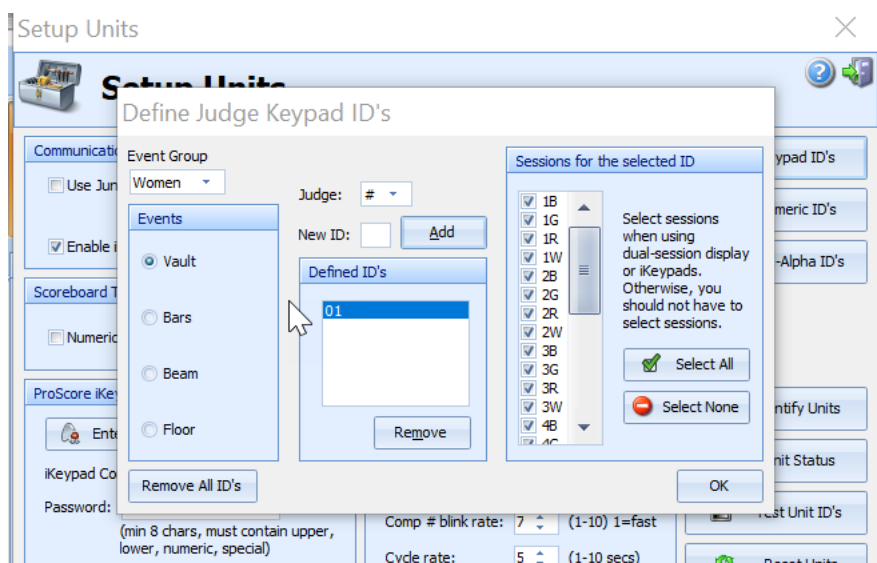

Pro Score iKeyPad IDs for Multijudge Panels

Women 2 Judge Panels IDs		
	J1	J2
Vault	1	2
Bars	3	4
Beam	5	6
Floor	7	8

Women 4 Judge Panel IDs				
	J1	J2	J3	J4
Vault	1	2	3	4
Bars	5	6	7	8
Beam	9	10	11	12
Floor	13	14	15	16


Note

J1 is Head Judge in all event panels

J1 must select athlete before others Judge iKeyPads populate


When a new meet is imported into Pro Score, you must go into Scoreboard Generator, **Setup, define iKeypads** and select all sessions by event to be scored.

Important you go **Event by Event** and select the **Sessions** to be scored.

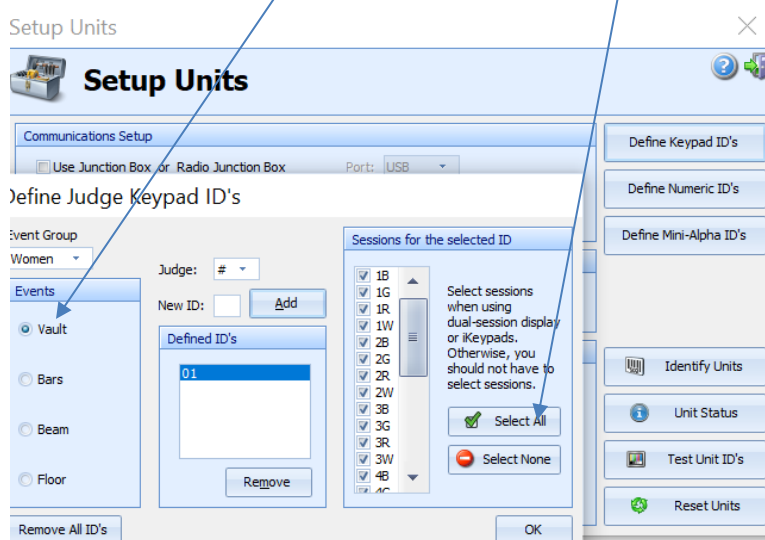


Do this for **Vault, Bars, Beam, and Floor**. The ID assignments for multi judge panels with each judge having an iKeypad are added and removed here.

9. With the **Sessions** selected for each **Event** (each event iKeyPad has an ID which corresponds to its event) you select **OK**, exit out of the Setup Menu, and are now ready to select the first **Session** to be scored. **Starting** the Score Generator program will now download to each events **iKeyPad** the competitors in that Session by Rotation/Flight. **ScoreGen** must remain **Running** in a meet.

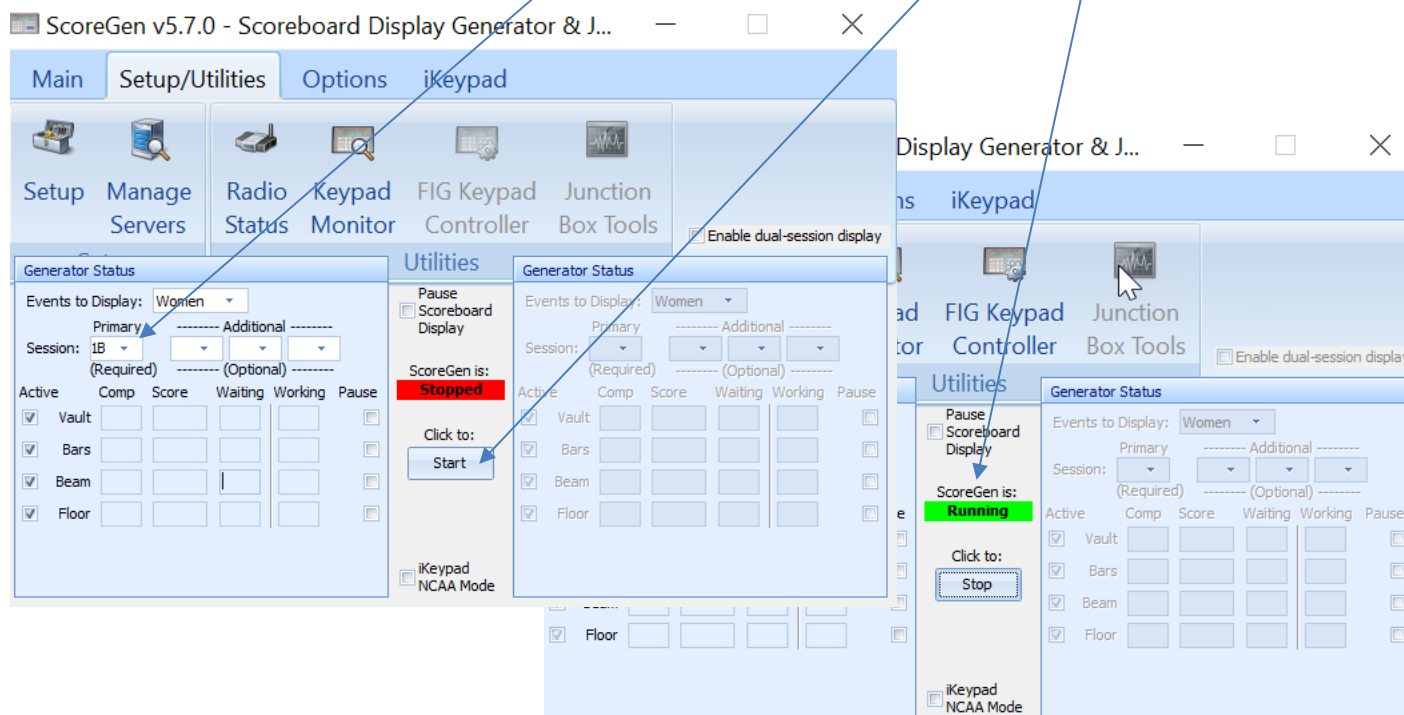


10. With Scoreboard Generator program now **Running**, now open the iKeyPad application on each iPad.


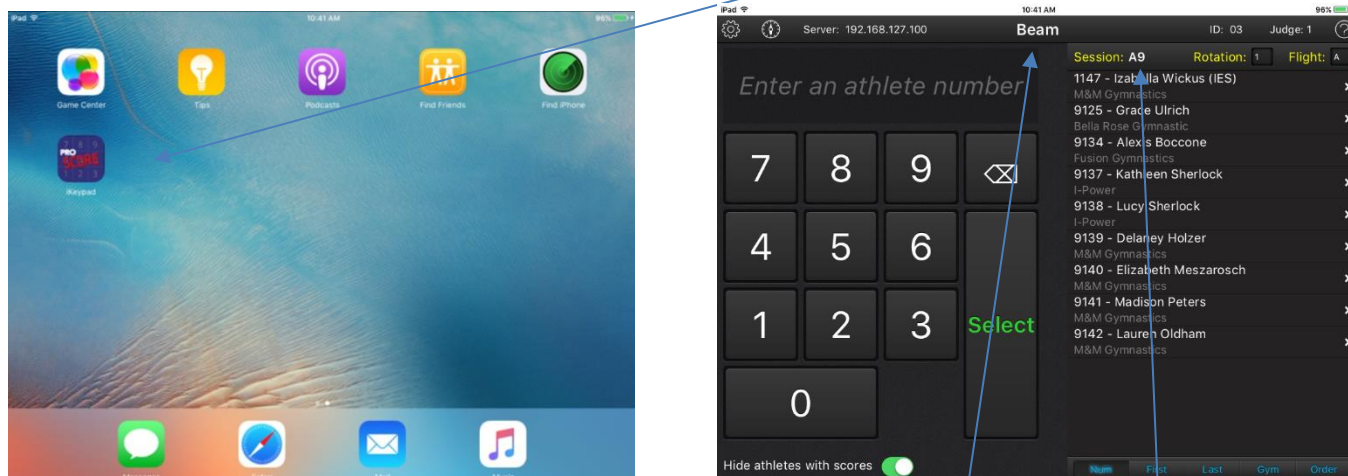


iKeyPad should open to the keypad screen showing correct **Event** and the **Session** selected in Score Generator. The iPads must be connected to correct network from the rental router (always labeled on Router front face), sessions selected by events in ScoreGen, and ScoreGen **Running**.


11. Last step is to open the **Elite FLEX MPRO** application which runs the entire system making sure it is set to work with **ProScore iKeyPad**.

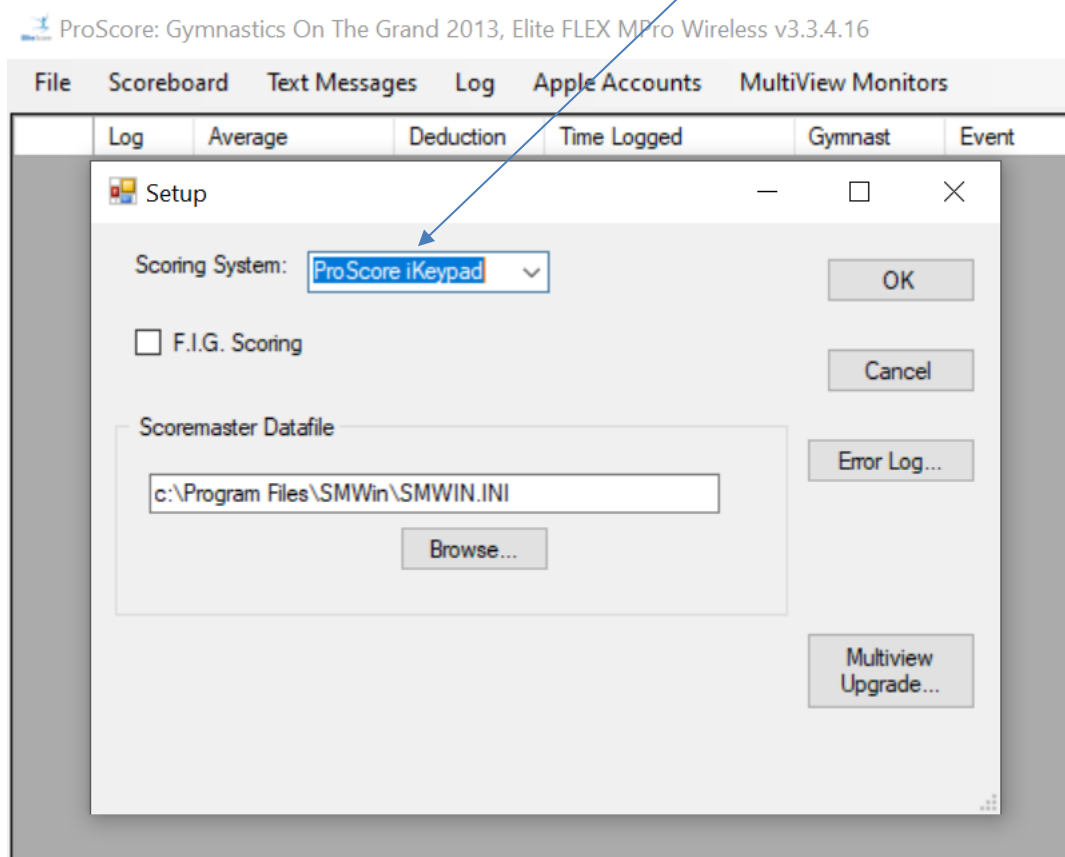



12. Score input with iKeyPad is quite easy and offers two options to select the competitor to be scored. You may key in the competitor's number directly or simply select the competitor from the list of gymnasts competing in the session. Let us select **1147-Isabella Wickus** from the list and we are ready to enter J1 & J2 scores from the keypad hitting **Enter** after each input. - **/+ ND** if necessary.

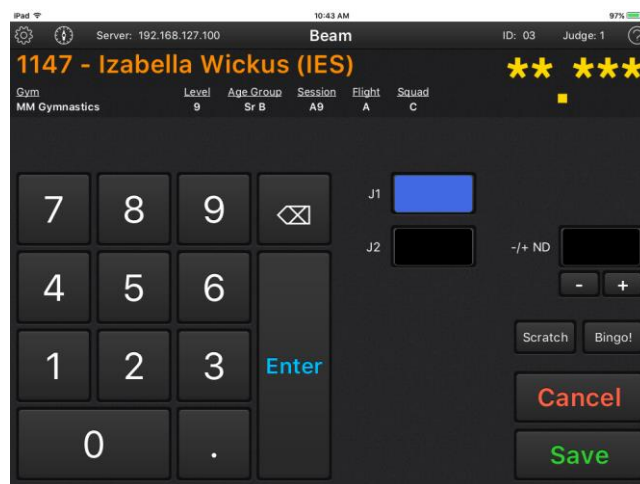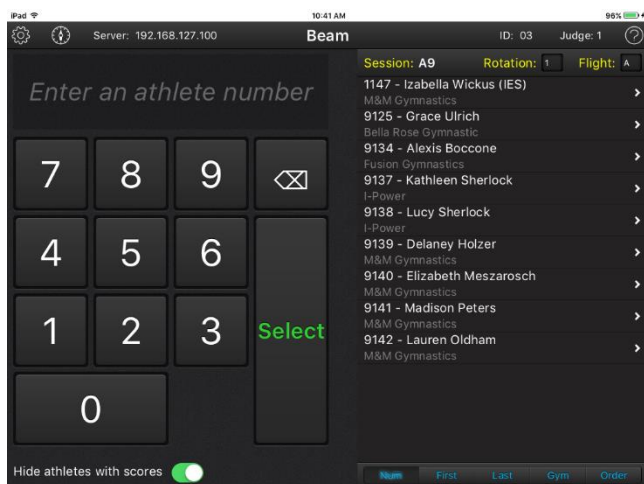

13. Once the two judges scores are entered (number of scores to be entered set in Pro Score under **Meet Info**) you should verify average score and if correct hit **SAVE** to send the score to Pro Score and on to the Scoreboard displays.

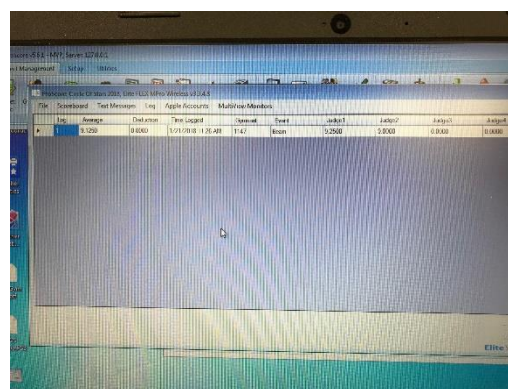

14. Note Izabella's score now appears in the Session list on your iKeyPad. You have the option to remove gymnasts with scores from the list by using the slide switch in lower left corner of the iKeyPad. **Hide athletes with scores**

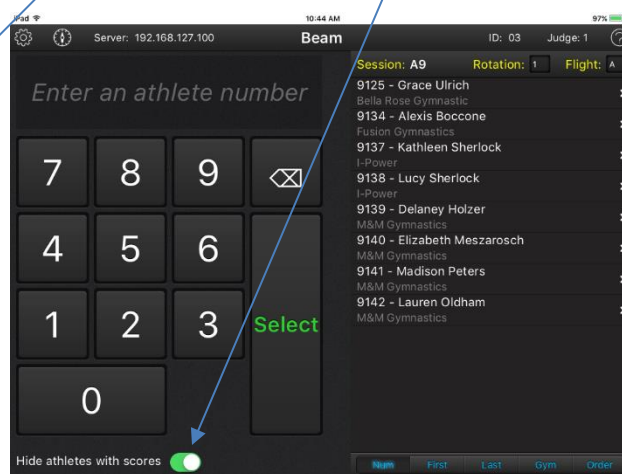
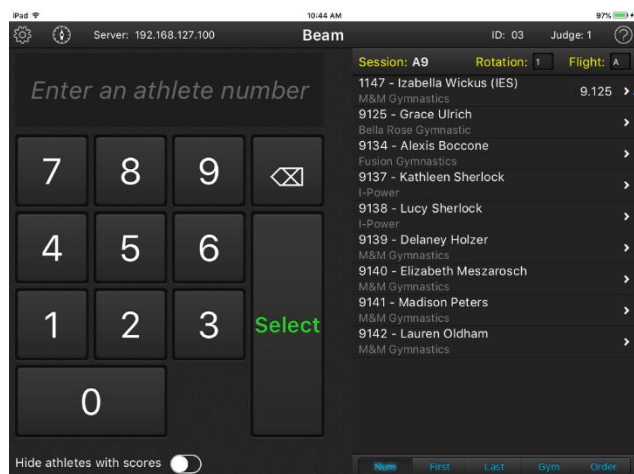




15. Other features of the iKeyPad application for score input include **Bingo** which can be used when one Judge's score is identical to the others. Enter score once and hit Bingo! You can also **Scratch** a gymnast. Be careful as once you **Scratch** from the iKeyPad to undo you must go back to Pro Score and reset by deleting the 0.000 score which was entered by the scratch.

Note the battery life of the iKeyPad is approximately 8 hours so we suggest returning to charger between sessions. A long day or three (3) sessions is easily supported with quick charge between sessions.


How to configure new iKeypad Application

All iKeypads to work in one system must contain the iKeypad password you set up in ScoreGen. Locate the setup screen in iKeypad by pushing the **Gear Icon** on the app.

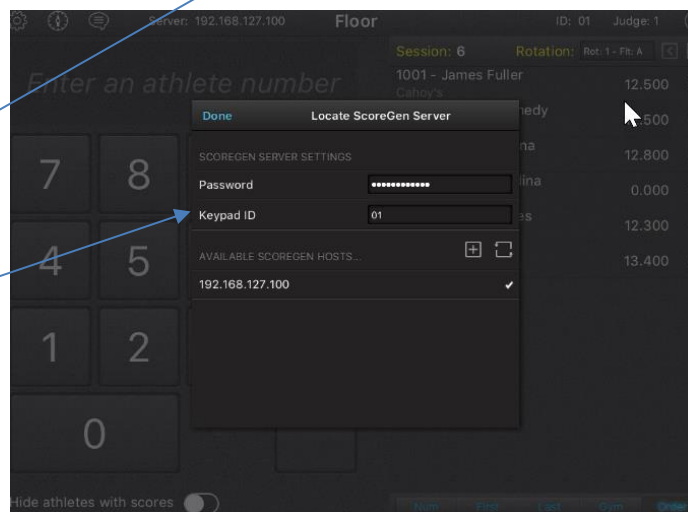
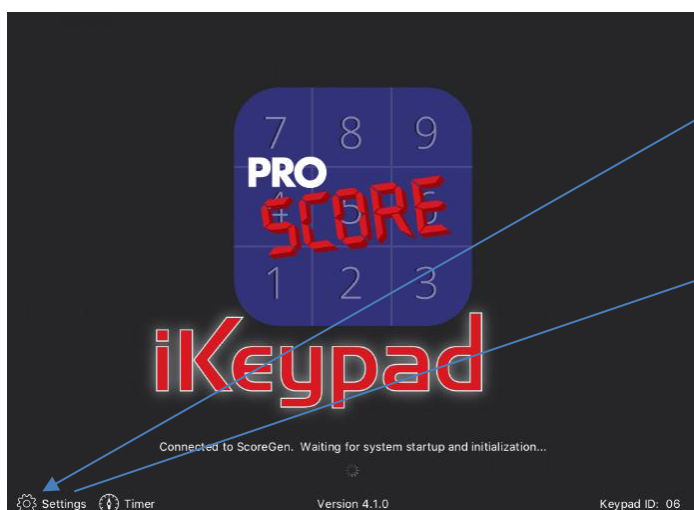


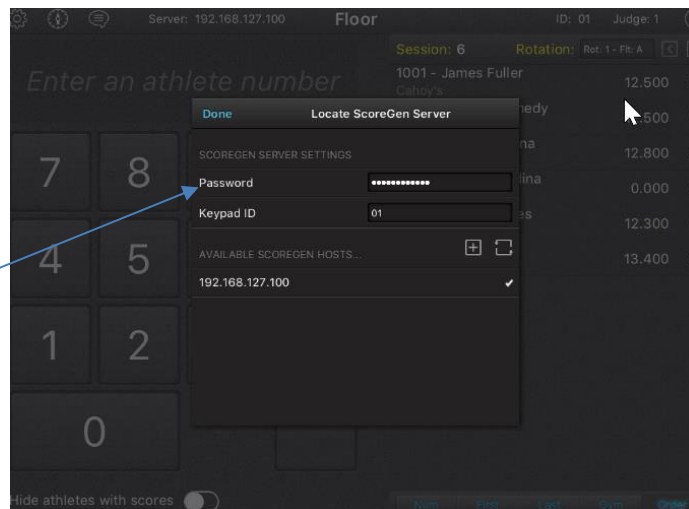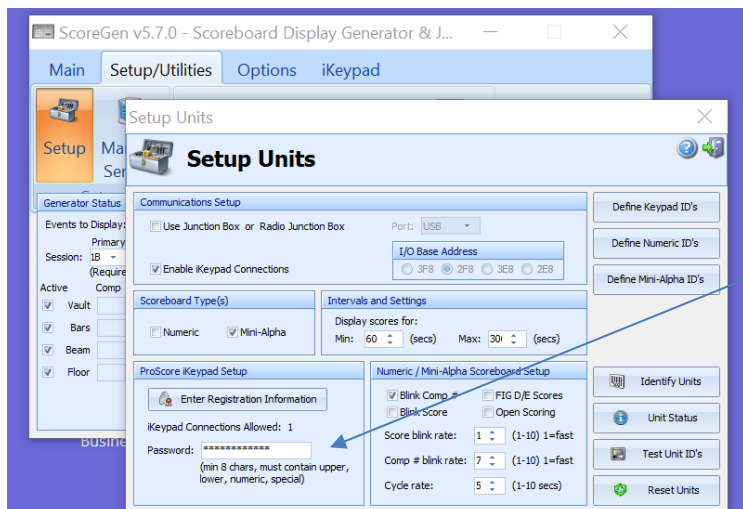

In this same setup screen is where you set the iKeypad ID which corresponds to the event and judge assignments you made in ScoreGen <setup> <<Define Keypad ID's>> This example is setting up Judge1 for Vault.

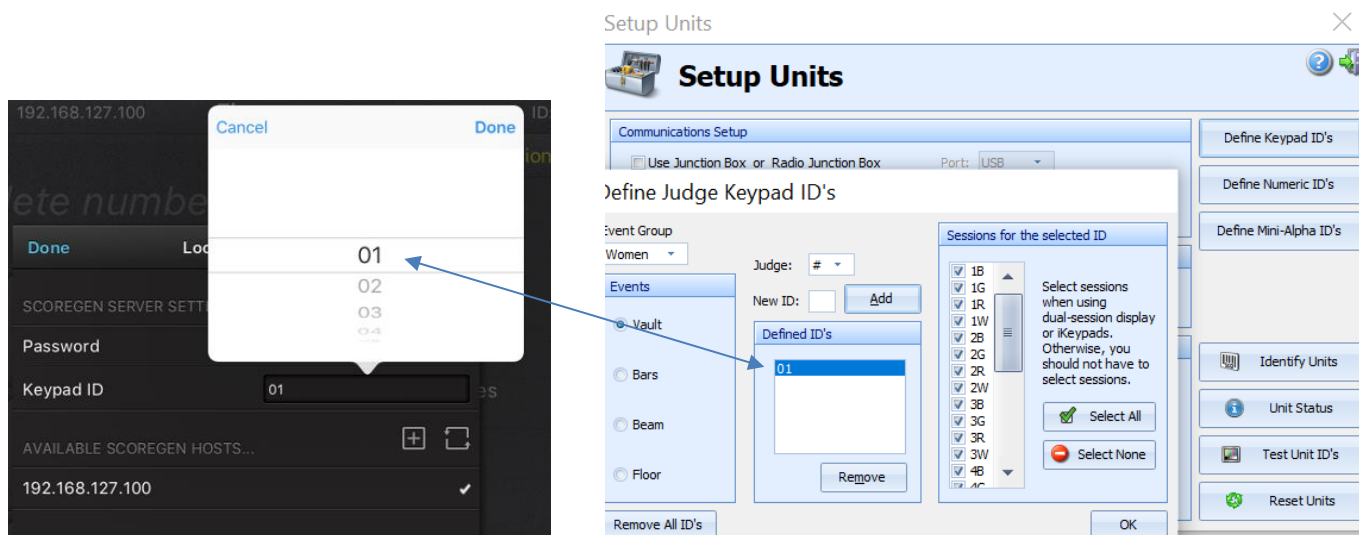

Lastly, each iKeypad needs to be connected to the scoring computer Wi-Fi Router SSID so you can use this setup screen to **locate** or **add** + the ScoreGen Server IP address. Once selected or added select **Done**

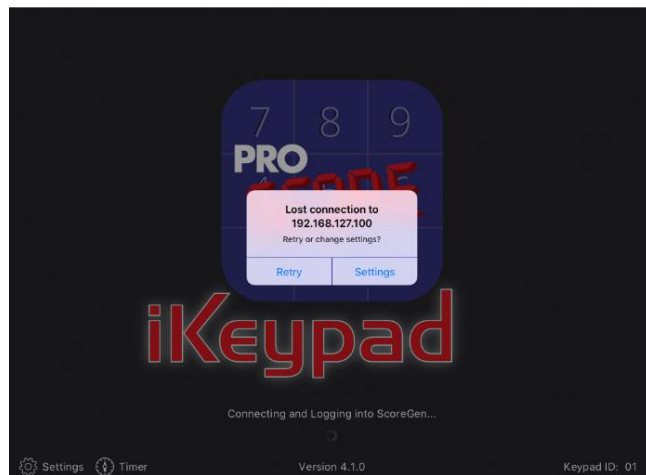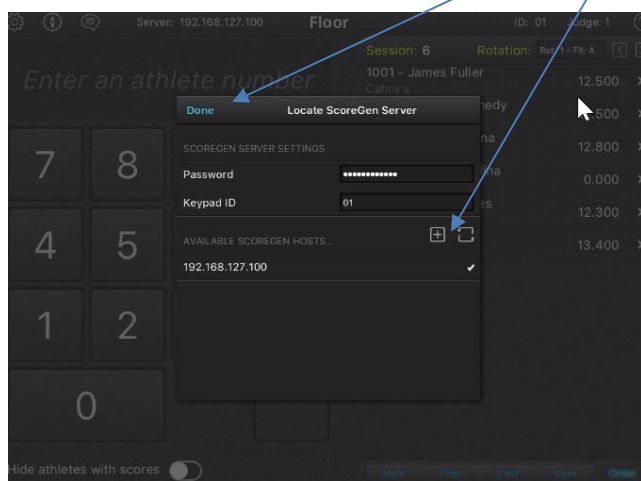

Lost connection warning message can be caused by iPad not connected to Wi-Fi/set to wrong network SSID name, failure to select Sessions for that event in ScoreGen, failure to have set up a corresponding Keypad ID in ScoreGen, incorrect ScoreGen Server IP address, or wrong ScoreGen Password.

Thank You for using EliteScore™ with iKeyPad and Pro Score. Call if you need assistance as customer satisfaction is our goal! 913.302.4200

Roger W. Resley

President/Founder

Elite Technology Company



Elite Technologies, LLC

5120 Stearns Avenue

Shawnee Mission, KS 66203

Phone 913.302.4200

E-Fax 408.273.6327

info@elitescore.com

www.elitescore.com